
SETTING UP THE 5308F2 (+ 5308F2L)

- 1) This fountain is simple to set up, but it includes two heavy pieces. Two people will be needed especially when assembling the tubing connection.
- Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.
- 2) Prepare a firm and level surface for your new fountain. With proper help, place your fountain Basin on that surface. Make sure to face the groove underneath toward your power supply.
- 3) Install a barbed adapter into the pump. Place the pump near the center of the Basin. Slip the power cord through the floor's center hole and, from underneath, pull it out toward your electrical connection.
- 4) Place the rubber stopper on the pump cord about 10" from the pump body. The larger end of the stopper should be closest to the pump. Push the stopper firmly in place within the Basin floor center hole to create a waterproof seal. (The top of the stopper should remain about 1/8" above the basin floor.) (If you have the fountain version with the 3-light set, now is the time to place your string of lights in and around your basin. Run the light power cord down through the floor center hole just like you did with the pump cord. Your kit should then include a stopper with two slits and holes for you to fit both cords through, then press firmly into place as above.)
- 5) Be very careful handling the heavy Vase. To not damage the intricate stone patterns on its side, never rest it against other hard objects. While one person tips the Vase back to provide access, thread the ½" nipple into the coupling inside the lower cavity of the Vase. Thread the check valve (flap side up) onto the nipple. Then thread the remaining barbed adapter into the bottom end of the check valve.

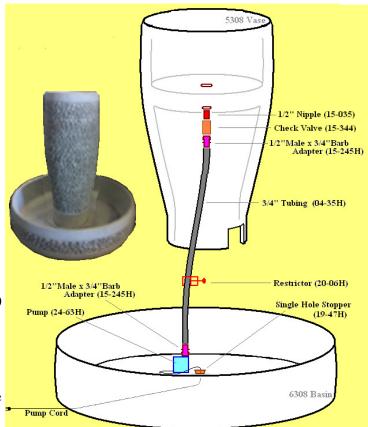

- 6) Push one end of the ¾" tubing over the barb you just installed on the Vase. Install the Restrictor clamp a few inches from the other end of the tube. Tighten the restrictor just enough to secure it in place on the tube. (Once operating the fountain, you can tighten the restrictor to lessen your water flow if desired.)
- 7) With the Vase in place in the middle of the Basin and over the pump, push the tubing onto the pump adapter. Place the small concrete Access Door into the door opening and fill the Basin unit with water to about 1" from the top. Read your pump (*and light*) instructions. Then connect the pump to your power supply to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock"

within the impeller chamber. Simply unplug and plug in a few times and it should start. Csd 5/2022

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT - WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.