

5587F2 SET UP INSTRUCTIONS

It is ideal to have 3 people to set up this


1) Prepare a suitable location for your new fountain. The fountain needs the support of a firm and level surface. Always follow local electrical codes. Make sure to connect to a safe 120V GFCI protected circuit.

2) Set the bottom Basin in its finished location, turned so the coupling/opening in the bottom is closest to your power supply.

3) Place the pump in the basin's center pump housing. Slip the pump power cord down through the hole in the floor and pull the cord out to the side from underneath – toward your power supply. Thread the barbed pump adapter into the top of the pump.

4) Set the fountain top down, near the basin. Attach longer water tubes to each of the plume lights. From the top of the fountain Top, slip each light into place by first inserting the connected water tubes and light power cords as shown. Pull them snug underneath the fountain top until the plume light itself rests in the molded recess on top.

5) Connect the ends of the light power cords to the Cord Adapter. Make sure the locking nut is turned snug to make it watertight. The unused receptacle should have a tight cap on it. Attach the 5-meter-long extension cord to the other side of the adapter as shown. Place the adapter in the fountain basin and push the remainder of the 5-meter-cord down through the hole in the floor. Now it is time to seal up this hole. Open the slits in the rubber stopper and place the pump cord and light extension cord in each groove, according to size. Close the slits and push the small end of the stopper down into the hole until only about 1/8" remains above the basin floor.

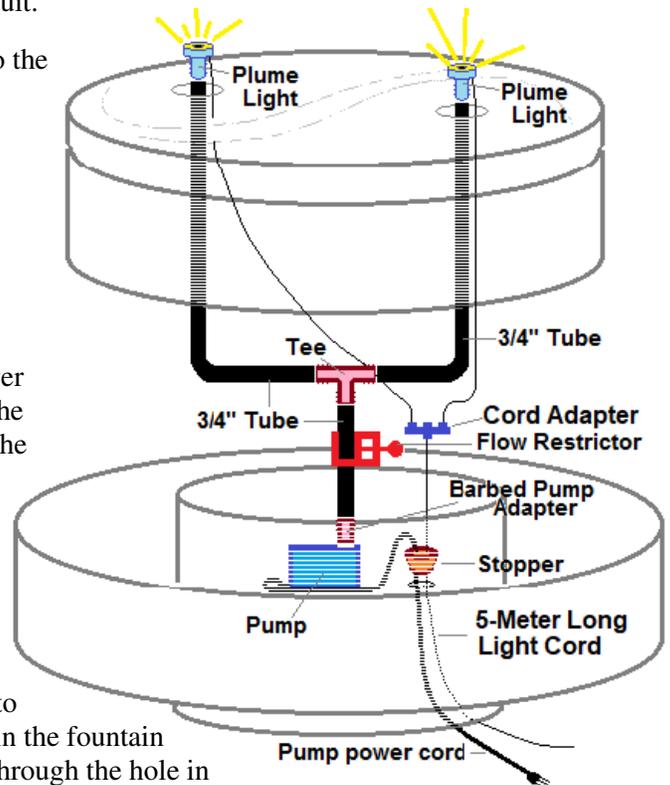

6) Push the bottom end of each water tube onto the tee as shown. Push the remaining short water tube onto the remaining leg of the tee. Position the flow restrictor on the middle of this short tube and tighten just enough to hold in place. (The flow restrictor can be tightened further if you want to turn down your waterflow later. That is optional. Some users will want a strong waterflow without any restriction.)

7) Now, as two strong helpers hold the top 5587A piece over the lower 5587B basin, press the lower end of the water tube onto the barbed pump adapter. Then gently set the top piece all the way down.

8) Fill the bowl unit with water to about 1" from the top. Read your pump and light instructions. Then, connect the light power cord to the transformer provided and plug in the transformer and pump to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start. Check for balance. Shims are provided in case your fountain balance needs to be adjusted.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Don't allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

7/16/2021

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.