


PATIO BUBBLER SET UP INSTRUCTIONS

- 1) Prepare a suitable location for your new fountain. The fountain needs the support of a firm and level surface. It is especially important if you have the tall pedestal “B” version of the fountain that it is set on a permanently level surface.
- 2) Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.
- 3) Place the Basin unit in its finished location. Be sure to turn the access hole at the bottom toward your electrical connection.
- 4) Insert the pump kit’s 3/4” long ring of tubing (“tube ring”) down into the opening of the fountain top. Allow this to nest in a level direction about 3/4” to 1” below the surface of the fountain top.
- 5) Securely slip one end of the wider tubing over the barbed attachment under the AB870 light. Thread the threaded end of the 15-45H barbed adapter into the other end of the same tube. Then push one end of the smaller tube over the barbed end of the adapter. Insert this tube assembly and light power cord together down through the top hole of the fountain top. The AB870 light should fit snug in the center hole of the Top.
- 6) Place the restrictor in the middle of the smaller tube, tightening just enough to hold it in place there. (Once operating the fountain, you can tighten the restrictor to lessen your water flow if desired.)
- 7) Push the small pump exhaust fitting into the top of the pump. Then push the open end of the tube over the exhaust fitting.
- 8) Place the rubber stopper on the pump cord about 10” from the pump body. The larger end of the stopper should be closest to the pump. Then, insert the power cord from the light into the stopper’s other hole. The length of the light cord from the light should be at least 6” longer than the water tube.
- 9) Slowly place the Top in place in the Basin. As you do, guide the two power cords down through the center hole. With the help of another person to hold items in place, tip the whole fountain back just enough to reach underneath and pull the loose cords out the access hole.
- 10) Returning your attention to the inside again, make sure the pump is sitting down in the lowest part of the Basin. Push the rubber stopper firmly in place to create a watertight seal.
- 11) Fill the bowl unit with water to about 1” from the top.
- 12) Read your pump and light instructions. Then, connect the light power cord to the transformer provided and plug in the transformer and pump to enjoy your fountain. If the pump does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start.
- 13) Save this instruction and make sure to winterize according to details below.

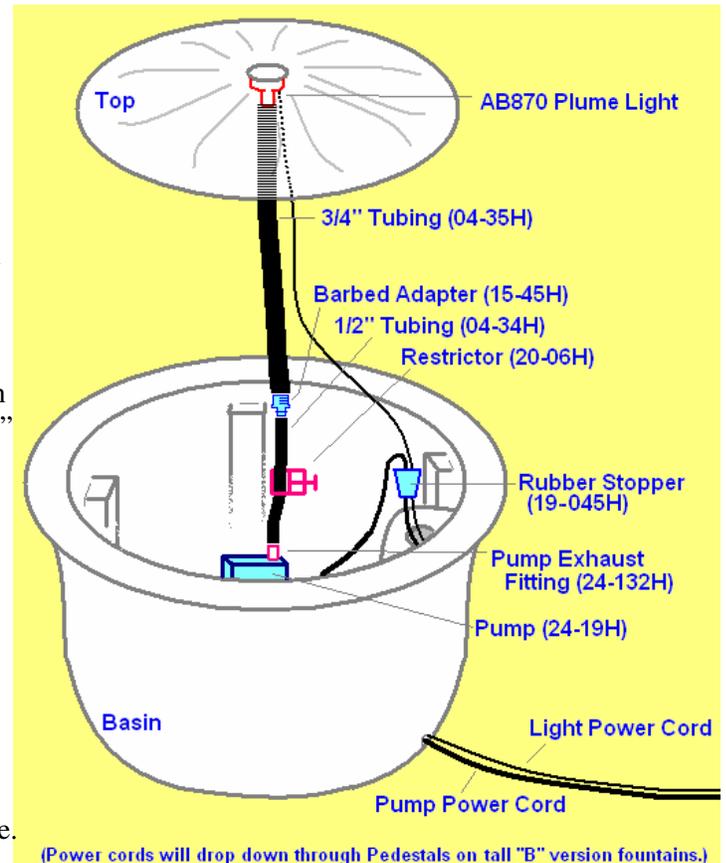

5/25/18

IMPORTANT – WINTER CARE

- Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:
- * Disconnect power to pumps and lights.
 - * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
 - * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
 - * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.