


SETTING UP THE 4012F

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

- 1) Prepare a suitable location for your new fountain, firm, fixed, and level.
- 2) Set the 6012 Basin in the center of your prepared location. Turn it so the cord relief hole at the bottom edge of the 6012 faces toward your power supply.
- 3) Place the pump in the basin. Slip the power cord down through the hole in the basin floor. Insert the pump adapter into the top of the pump. Push the 1/2" water tube onto the pump adapter. Push the barb of the thread x barb adapter into the top of the 1/2" tube.
- 4) Place a soft cushion like a folded blanket over part of the 6012 Basin. Then carefully turn the 4012 Fountain Top onto its side and set it on the basin – away from the basin's birds – with the cushion in between. Push one end of the 3/4" tube over the barb underneath the light. Slip the light with its power cord and attached water tube down into the top of the 4012 Fountain Top.
- 5) Push the light power cord down through the hole in the floor of the 6012 Basin just like you did with the pump power cord. With help, tip the fountain enough to reach underneath and pull both cords out under the notch cast into the bottom edge of the basin – continuing toward your power supply.
- 6) In the bottom of the basin, open the slits of the rubber stopper and place the pump cord in the larger hole with the light cord in the smaller hole. Press this stopper into the hole in the basin floor to make a water proof fountain.
- 7) Install the Flow Restrictor onto the 3/4" tube as shown, tightening just enough to hold in place. (It can be tightened more later if you want to slow down the fountain water flow.)
- 8) With help, lift the 4012 Top, remove cushion, push the 3/4" tube onto the threaded side of the thread x barb adapter, and set the 4012 Top down on the 6012 Basin.
- 9) Read your pump and light instructions. Fill the bottom bowl with water. Then plug in the pump and connect to the light transformer to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

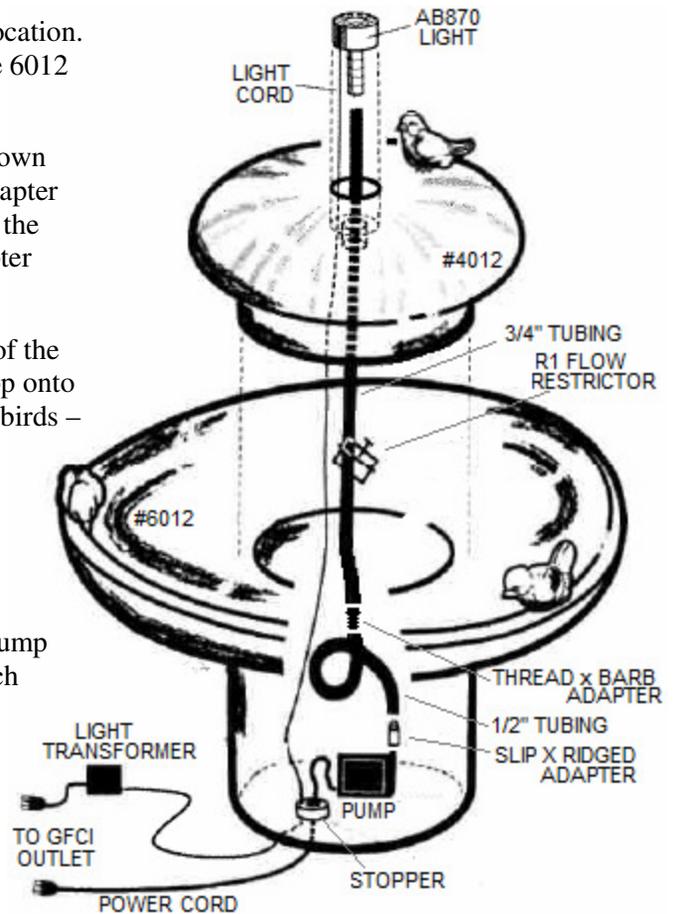

csd 5/2019

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.