

SET UP INSTRUCTIONS FOR 4410F1 - 4417F1

1) Set your fountain on your chosen location and position it toward your preferred viewing direction.

2) Place the pump and light in the fountain floor. The pump should be closest to the back wall and the light should be out in front, aiming back at the middle of the high fountain wall.

3) Push both power cords out the floor's corner hole. Open the split rubber stopper and place each cord inside one of the slit-holes. (The hole for the pump cord should be a little wider than the hole for the light cord.) Then push the stopper firmly into place to create a watertight fountain.

4) Thread the adapter into the bottom face of the fountain as shown and push the exhaust fitting firmly into the pump.


5) Place the restrictor clamp onto the middle of the water tube and tighten just enough to hold in place. (Later, once you turn your fountain on, you can tighten this if you wish to reduce the water flow.)

6) Push the tubing onto the adapter and the pump exhaust.

7) Push the short copper tube into place over the exposed black barbed fitting cast into the upper front of the fountain wall as shown (if it is not already installed).

8) Read your pump and light instructions. Then connect the plug / transformer to your power source to see the fountain run. If your pump does not produce flow immediately, there may be an "air lock" in the impeller chamber. Simply unplug and re-plug the pump a few times to clear the air-lock.

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

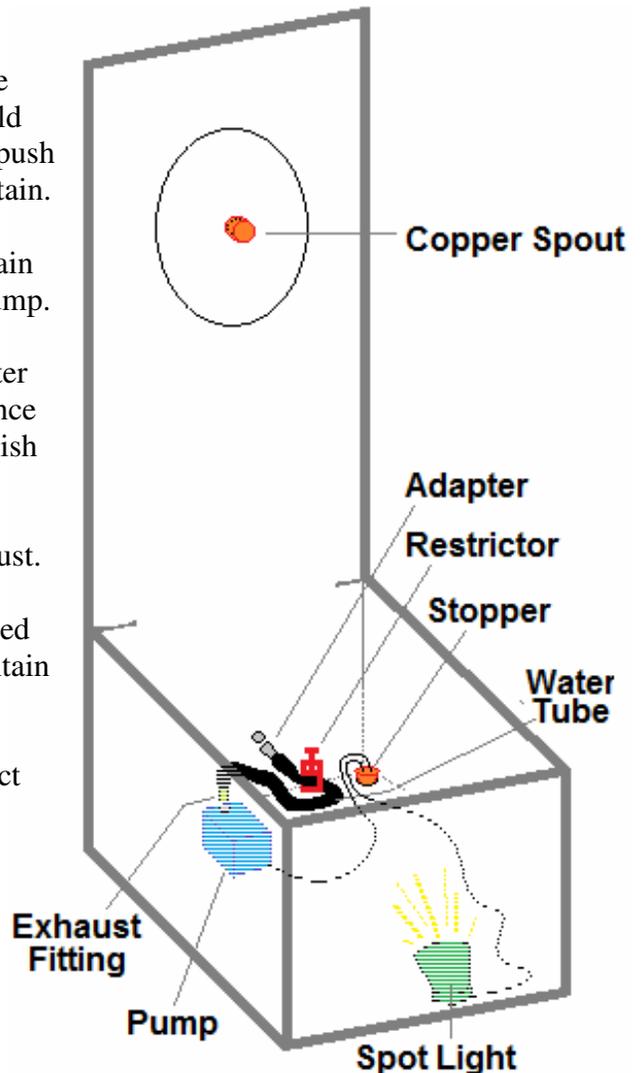

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

4/11/19