


5011F3 SET UP INSTRUCTIONS

- 1) Prepare a suitable location for your fountain. The fountain needs the support of a level and very firm surface.
- 2) Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.
- 3) Place the 6011BH Bowl/Pedestal unit on your prepared surface. Make sure to face the access hole near the bottom away from your primary view point and / or toward your power supply.
- 4) Place the Pump in the center of the bowl and push the power cord down through the center hole. Pull the cord out from under the bowl and toward your power supply. Fit the Stopper with the small hole around the power cord and push into the Bowl's center hole to make water tight.
- 5) Insert the Exhaust Fitting into the top of the pump. Push both tubes onto the Barbed Adapter. Then push the other end of the smaller tube onto the pump's exhaust fitting.
- 6) Set the 6011AH Bowl/Pedestal on the 6011BH, pulling the tubing up through the center hole and sealing the hole with one of the remaining stoppers. Check for level and use shims under the Bowl/Pedestal to make adjustments as needed.
- 7) Place the 5011H FINIAL on top, with the remaining tubing slipped up inside.
- 8) Fill the bowl unit with water to about one inch from the top. Place the concrete access door in the opening at the bottom.
- 9) Read your pump instructions. Then, plug in the pump to enjoy your fountain. If desired, you may dial down the top water action by pushing the tubing further down in the finial. Once you begin pumping the water is also a good time to fine tune your leveling with the shims provided.
- 10) Save this instruction and make sure to winterize according to details at right.

Csd

1/2018

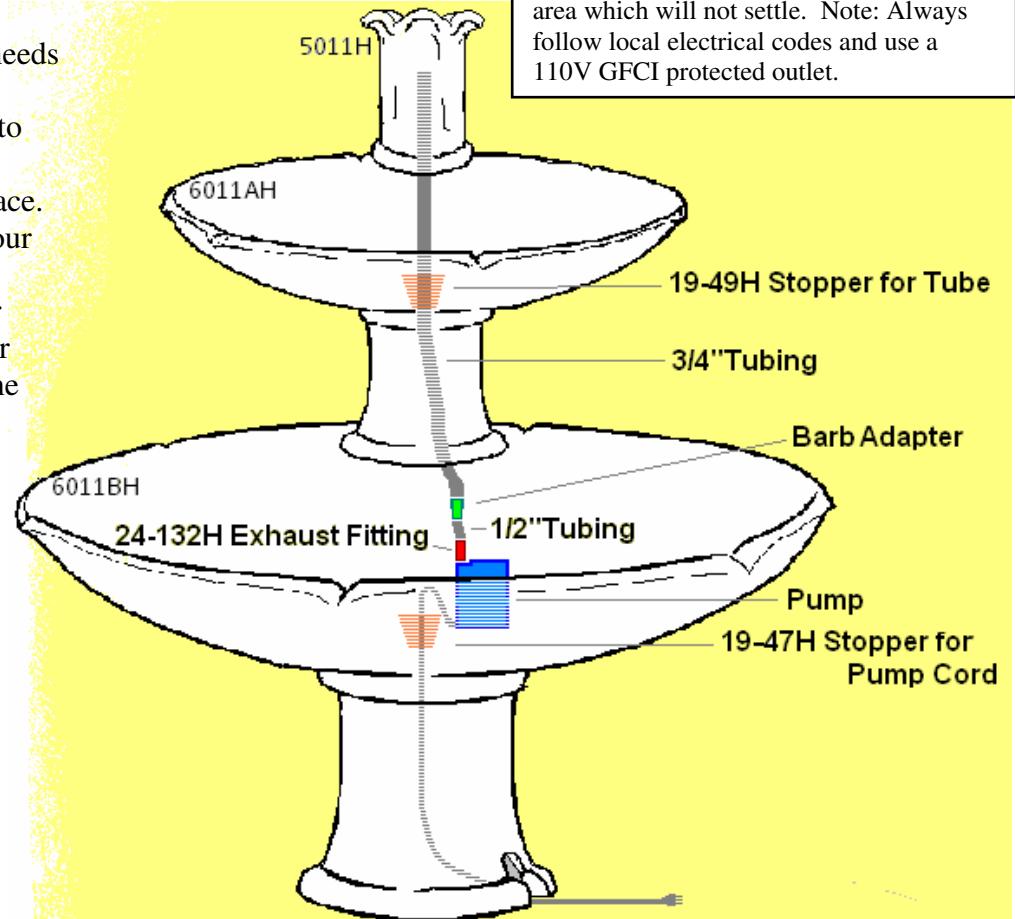

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

Online Resources

Products: http://www.henristudio.com/us/product_catalog
FAQs: <http://www.henristudio.com/us/faq>
Warranty: <http://www.henristudio.com/us/warranty>
Contact : <http://www.henristudio.com/us/forms/contact-us>