

SETTING UP THE 5585F2

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

1) Place pump in the 6585 Basin and construct the tube system as shown:

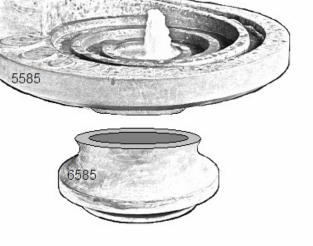

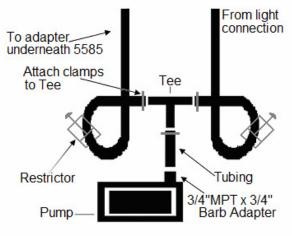

2) Attach one tube to the light's barb. Tip the 5585 Hurricane Eye and slip the light cord and tube down through the large hole on the side as shown. (Center hole is for water to drain.)



 Install the smaller barbed adapter under the 5585. Connect the other tube to the adapter's barb.

4) Push the pump cord and light cord down through the hole in the 6585, and out the side below toward your power supply. Open the slit in the stopper and place the light cords in the stopper holes, then close and press the stopper tightly into the floor of the 6585 to make the fountain watertight.



5) Read your pump & light instructions. Fill with water and start the fountain. If the pump does not immediately start, there may be an "airlock" in the

impeller chamber. Simply unplug and replug several times and the airlock will clear.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

Online Resources

Products: http://www.henristudio.com/products
FAQs: http://www.henristudio.com/warrantv
Contact: http://www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.