

SET UP INSTRUCTION for 5703F2

1) Prepare a suitable location for your new fountain, with a firm and level surface.

2) Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.

3) Place the fountain's basin unit on its finished location. Notice that one side of the basin bottom has a groove to allow power cords out. Face that side closest to your power source.

4) Set the fountain top piece on its side. Slip the AB870 light, cord first, into the Diffuser Tube. Pull the cord all the way through and allow the light to nest into the top of the diffuser tube. (In this fountain, the barb attached to the light will not be used, the outside of the light itself should rest nicely in the tube. Set the diffuser tube down into the top opening of the fountain.

5) The 15-359 Adapter has a slot in the threaded portion which fits the light cord. With the Adapter held below the fountain top, place the light cord into the slot and thread the Adapter into the threaded coupling on the underside of the fountain top.

6) Push one end of the 3/4" Tube over the barb of the 15-359 Barb Adapter.

7) With the help of a second person, hold the fountain top close to the basin (or carefully rest it on the basin). Drop the light power cord down through the basin hole and pull out from under the basin. Place the pump in the center of the basin. Push its cord down through the basin hole, also pulling it out from under the basin.


8) Place the two-holed rubber stopper on the pump cord about 7" to 10" from the pump body. The larger end of the stopper should be closest to the pump. Then, insert the power cord from the light into the stopper's other hole. The length of the light cord from the light should be longer than the water tube. Press the stopper down into the hole to make a water tight seal. The top of the stopper should remain 1/8" above the concrete floor

9) Thread the 15-157 adapter into the pump. Push the open end of the Tube over the pump adapter.

10) Gently set the fountain top in place in the basin. Fill the bowl unit with water to about 1" from the top.

11) Read your pump and light instructions. Then, connect the light power cord to the transformer provided and plug in the transformer and pump to enjoy your fountain. Two shims are provided in case you want to adjust the level of fountain top piece. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

12) After starting your fountain, you may adjust the amount of water action by moving the Diffuser Tube up (less action) or down (more action). Save this instruction and make sure to winterize according to details below.

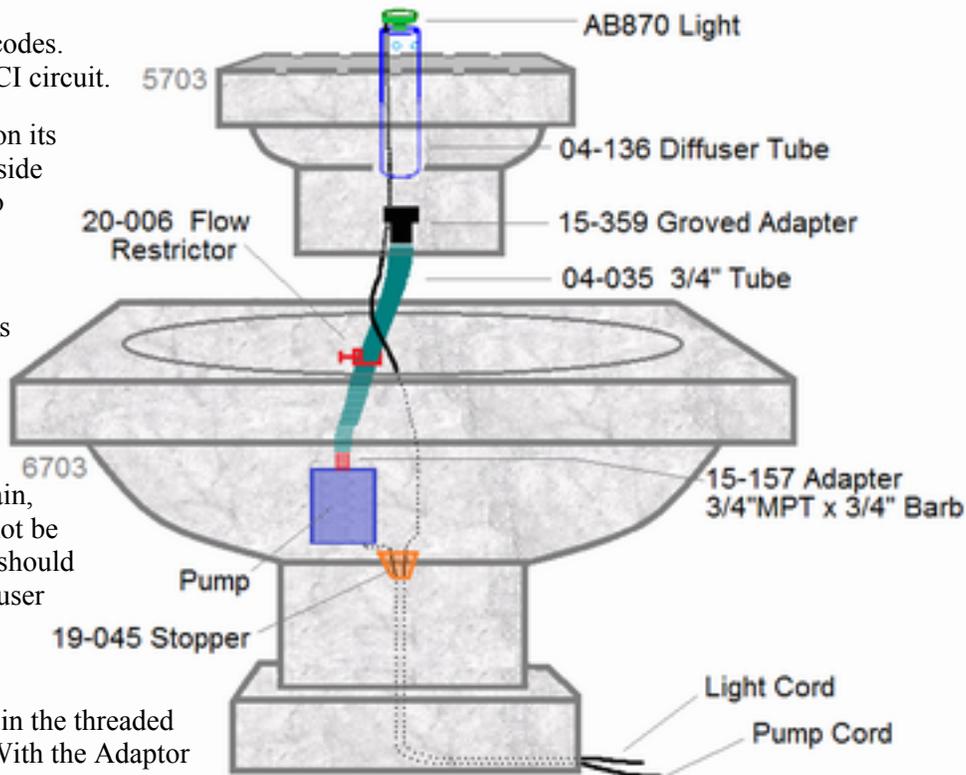

Csd

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.