


Classical Garden Gazebo


Assembly Instructions



No. 2222 Basic Unit w/ Optional Inserts

CLASSICAL GARDEN GAZEBO DIMENSIONS

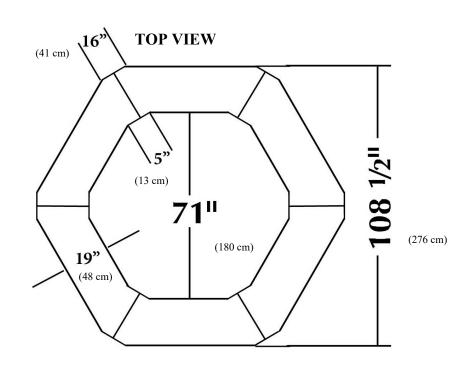

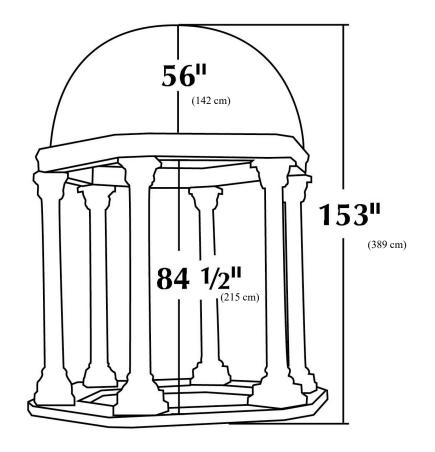

Henri Studio

Classical Garden Gazebo Assembly Instructions

Henri Studio's Classical Garden Gazebo is a traditional cast stone design comprised of classic architectural columns and elements, crowned by a delicately fashioned cupola of complex metal work. Optional balustrades, benches, and planters can also be added in various combinations for custom design flexibility. Henri's Classical Garden Gazebo creates a formal garden destination, a compelling focal point that captures the magic of the landscape.

The **No. 2222 Classical Garden Gazebo** is a basic unit featuring six base plates, six columns, six headers, and a four-piece metal cupola. In addition, up to five spaces between the columns may be filled with any one or combination of three optional elements: the four-piece **Balustrade** (railing) unit (No. 2223); the three-piece **Bench** unit (No. 2224); or the one-piece **Planter** (No. 8222).

Note: The total weight of the basic Classical Garden Gazebo is over 5300 lbs (2415 Kg). Appropriate lifting machinery should be used for installation, and all proper safety procedures should be followed. We recommend the use of burlap or other padding to protect the item finish from scratching or damage during assembly.

Parts

- 6 2222B Gazebo Base Plates
- 6 2222C Gazebo Columns
- 6 2222H Gazebo Headers
- 1 2222D Metal Cupola (4 identical sections)
- 6 Metal Base Pipes
- 6 Large Metal Straps (9 inches long), for joining headers
- Large Strap Bolts (1 inch long), for large and small metal straps
- Large Washers (7/8 inch diameter), for large and small metal straps
- 6 Small Metal Straps (4 ½ inches long), for securing metal cupola to headers
- 16 Small Bolts (7/8 inch long), for joining metal cupola sections
- 32 Small Washers, for joining metal cupola sections
- 16 Small Nuts, for joining metal cupola sections

Site Selection

Site for the Classical Garden Gazebo must be level. The basic shape of the unit and base is a hexagon, and one side of the hexagon will function as the open doorway to the gazebo interior. Plan to face this side as desired.

If installing the gazebo on a solid surface, ensure that the surface is level and able to support the overall weight of the unit. If installing the gazebo on lawn or ground, ensure that an appropriate foundation or footing is used. Dig the footing to the appropriate depth (Fig. 1 & 2), at least 18 to 24 inches, deeper in areas of extreme frost. Either pour concrete to form the footing, or use gravel. In either case, fill the footing excavation and make level (Fig 3). Once the footing is created, lay the six base plates into position as shown, taking care not to damage corners when pushing into position (Fig. 4).

If planning to install lighting to illuminate the interior of the gazebo from either the top of the columns or from the cupola, this is the time to consider electrical wiring. Columns are hollow, with conduit channel for such wiring which may be pulled up through the bottom of one or more columns. Follow all local electrical codes.





Fig. 1 Fig. 2





Fig. 3 Fig. 4

Assembly of Basic Gazebo Unit

With base plates positioned, carefully place a column onto the base plate as shown, protecting base plate with padding to avoid damage (Fig. 5). Insert a metal base pipe into the base of the column and tap in firmly (Fig. 5). Now lift into position, guiding the bottom pipe into the center of the joined base plates.

Once three columns have been positioned, place a header atop the first two columns, over the top metal pipes as shown (Fig. 6), using appropriate lifting gear. Place the second header atop the second and third columns. Join the two headers using the long 9-inch metal straps and 1-inch bolts and washers as shown (Fig.7). Hand tighten only at this point.

Continue to add columns and headers as above, assembling with metal straps, until assembly is complete. Use wedges under columns if required.

Once all six columns and headers are satisfactorily positioned, tighten bolts fully.





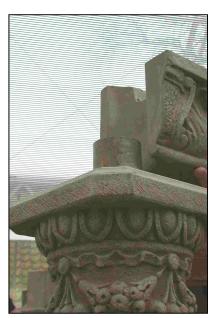


Fig. 6



Fig. 7

The metal cupola may be installed in either of two ways. If appropriate lifting equipment is available, assemble the four cupola pieces on the ground to make a complete unit. Join the sections using the smaller 7/8 inch nuts, bolts, and washers, through the holes in the sides of the cupola sections. When unit is assembled, lift into place atop the headers. Then, secure cupola to headers using the smaller 4 ½ inch straps and 1 inch bolts and washers.

Alternately, each section may be individually lifted to the top of the header, and assembled on top. For this approach, place the first cupola section into position atop the header and fasten using the smaller 4 ½ inch long metal strap and two 1 inch bolts and washers as shown (Fig. 8). Follow the same procedure for the second section, fixing both sections together with the smaller 7/8 inch nuts, bolts and washers through the holes in the sides of the cupola sections. Hand tighten only. Repeat this procedure until the four sections are joined. When the cupola is satisfactorily placed, tighten all bolts (Fig.9).





Fig. 8

Fig. 9

Addition of Optional Inserts

With the Basic Gazebo Unit assembled (Fig. 10), up to five spaces between the columns may be filled with any one or combination of three elements as shown on the next page.



No. 2223 four-piece **Balustrade** (railing) unit (Fig. 11 & 12): Place the three balusters (pedestals) in line between the columns as shown, and carefully slide the top railing between the columns on onto the pedestals.





Fig. 11 Fig. 12

No. 2224 three-piece **Bench** unit (Fig. 13 & 14): Place the two pedestals as shown and carefully slide the bench top between the columns and onto the pedestals.





Fig. 13 Fig. 14

No. 8222 one-piece **Planter** (Fig. 15): Simply place between the columns.



Fig. 15

1 YEAR LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any HENRI STUDIO product (hereinafter referred to as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 1 year from the original purchase.

WARRANTY COVERAGE: HENRI STUDIO warrants to the original Consumer Purchaser that any Product of its manufacture is as represented in its catalogue and is free from defects in material and workmanship. THIS WARRANTY IS VOID IF THE PRODDUCT HAS BEEN DAMAGED BY ACCIDENT UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSE NOT ARISING OUT OF DEFECTS IN MATERIAL OR WORKMANSHIP.

HENRI STUDIO is not responsible for Products cracked or damaged due to exposure to freezing temperatures.

This warranty shall not apply in any manner to parts or accessories not manufactured by HENRI STUDIO.

WARRANTY PERFORMANCE: During the above 1 year warranty period, HENRI STUDIO shall repair or replace with a comparable model, any Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, when the product is returned, shipping to and from prepaid to:

HENRI STUDIO, 1250 Henri Drive, Wauconda, IL 60084

Other than the shipping requirement no charge will be made for such repair or replacement of in-warranty Products. HENRI STUIO strongly recommends that you insure the Product for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE IMITED IN DURATION TO THE ABOVE 1 YEAR PERIOD. HENRI STUDIO SHALL NOT BE LIABLE FOR LOSS OR USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights, which may vary, from state to state.



1250 Henri Drive Wauconda, IL 60084 8 Tel 847-526-5200 Fax 847-526-6782