

## Angella In Toscana Pool Fountain 5897F12

### Assembly Instructions

1. Locate a suitable site for your Angella Fountain. Site should be level and provide a pleasing viewing angle. You should always follow local electrical codes and use a GFCI Protected outlet.

NOTE: this is a tall vertical sculpture and care should be taken to provide a level surface before assembly is started, as a slight angle will be noticeable and can affect the fountain's water action.

2. Using Teflon tape, thread the 1 1/2" stand pipe in the center of the 6719 Toscana Fiberglass Pool Bottom. Pass the power cord of the pump through the stand pipe leaving approximately 12-18" of cord to the inside of the bowl. Install a rubber stopper over the power cord and insert it into the top of the stand pipe. The rubber stopper has a slit in it. Spread the stopper apart at the slit and slide the cord into the hole in the center of the stopper. Use the provided corks to plug any unused holes.

3. Thread the 3/4" Barb Adapter on the pump outlet. Connect the 3/4" ID clear x 4" tube to the Barb Adapter using a hose clamp.


4. Insert the "H-Tee" assembly into the tube. Connect the three pieces of 12" X 3/4" No-Kink Tube to the legs of the "H" Tee. Slip a Flow Restrictor over the ends of the tubes so that they are approximately 4-6" from the end. Connect tubes with adapters + clamps to statue as shown, using the smaller barbed adapters between 3/4" and 3/8" tubes. Two tubes connect under the Angella statue. The third tube connects under the Pedestal Bowl, which is set next to Angella. Last, insert brass nipple in bowl. Restrictors can be tightened to balance water flow.

### IMPORTANT-WINTER CARE:

Do not allow water to collect and freeze in fountain bowl(s) or shell. Do not allow fountain pieces to sit in a pool of ice. Disassemble entire fountain and pump and store indoors during the winter season.

If you cannot store your fountain indoors during the winter season, you must at least protect it from ice collection or exposure. Protect your fountain during the winter season: first remove the statue(s) and pump, storing them inside if possible. Next, locate the drain plug on the underside of bowl(s) or shell. Remove drain plug to drain any water "trapped" between the walls of the bowl(s) or shell. Then fill the bowl(s) or shell with an absorbent material such as burlap, blankets, etc. Finally, cover the entire fountain with a Henri Fountain Cover. Should condensation droplets form on the inside of the cover, they will be absorbed by the material.

By following these simple and sensible precautions during the winter season, you will protect your fountain for years of beauty and enjoyment!

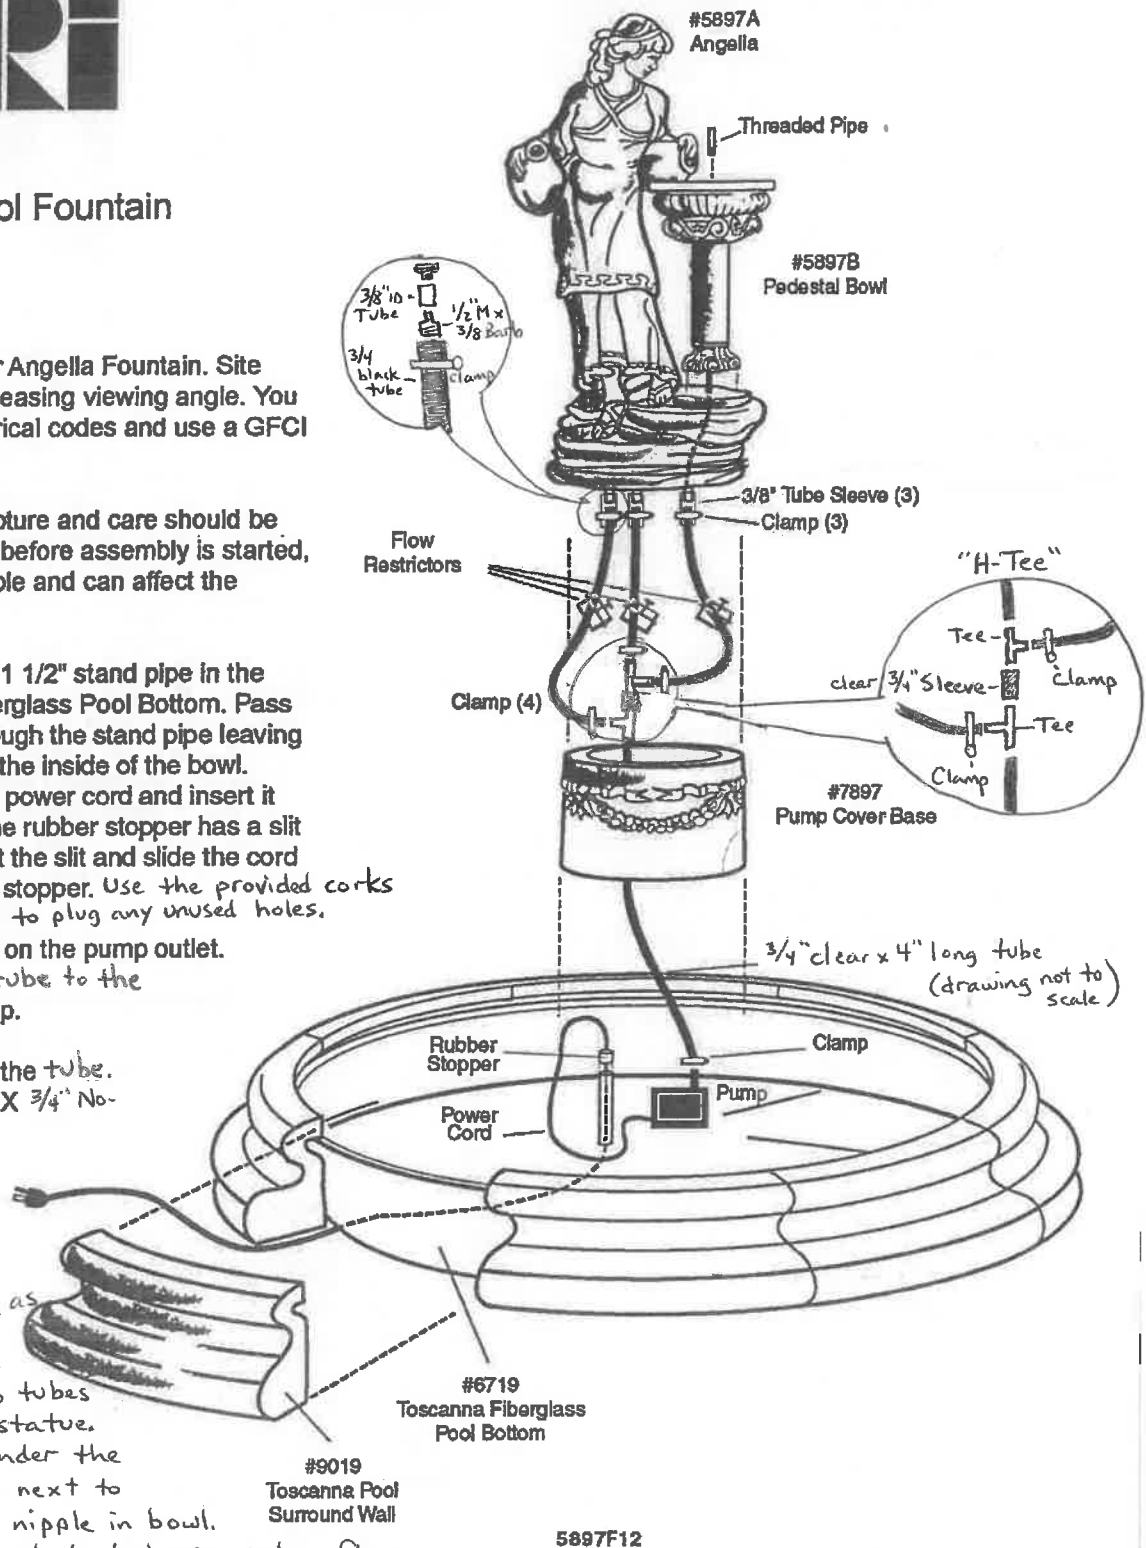

5897F12