

# SETTING UP THE 5649F15

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

1) Prepare a suitable location for your new fountain – flat, level, and firm. Set the 6719 Fiberglass Pool down on this foundation. Check the Stand Pipe to make sure it is tight – or – if the stand pipe is not already installed, thread it in using plumber's teflon tape to make sure the pool can remain watertight.


2) Place pump in the center of the pool and push its power cord down through the stand pipe. Your fountain connection kit also comes with four small stainless steel brackets and four screws used to hold the Henri Studio AB874L light set in place. If you chose to use this optional light kit, now is the time to place the lights in the bowl and run its power cord down through the stand pipe. With help, lift the pool and pull the extra power cord down and out away from the pool toward your power source. Reset the pool and then use the brackets to mount a light to each of the four light mounting couplings you will find in the floor of the pool.

3) Open the slit/s in the Rubber Stopper and place the power cord/s in the molded grooves. (The biggest groove is for the pump cord. The corks will keep the stopper sealed unless you need to pull one out and use that groove for an optional light cord.) Close the slit/s and push the stopper into the top of the stand pipe.

4) Thread the smaller barb adapter into the pump and push a long water tube onto it. Secure with a clamp. Place a flow restrictor a few inches above the clamp by tightening it just enough to hold it in place.

5) Set the 7651 Pedestal in the pool, around the pump and standpipe. Pull the water tube up through the pedestal.

6) Thread the 12" long stand pipe into the hole in the floor of the 6649S Bowl. With plenty of help, slowly lower the bowl onto the pedestal, but before you set it all the way down, slip the top end of the water tube up through the bowl and stand pipe. Now, you can set the bowl all the way down.

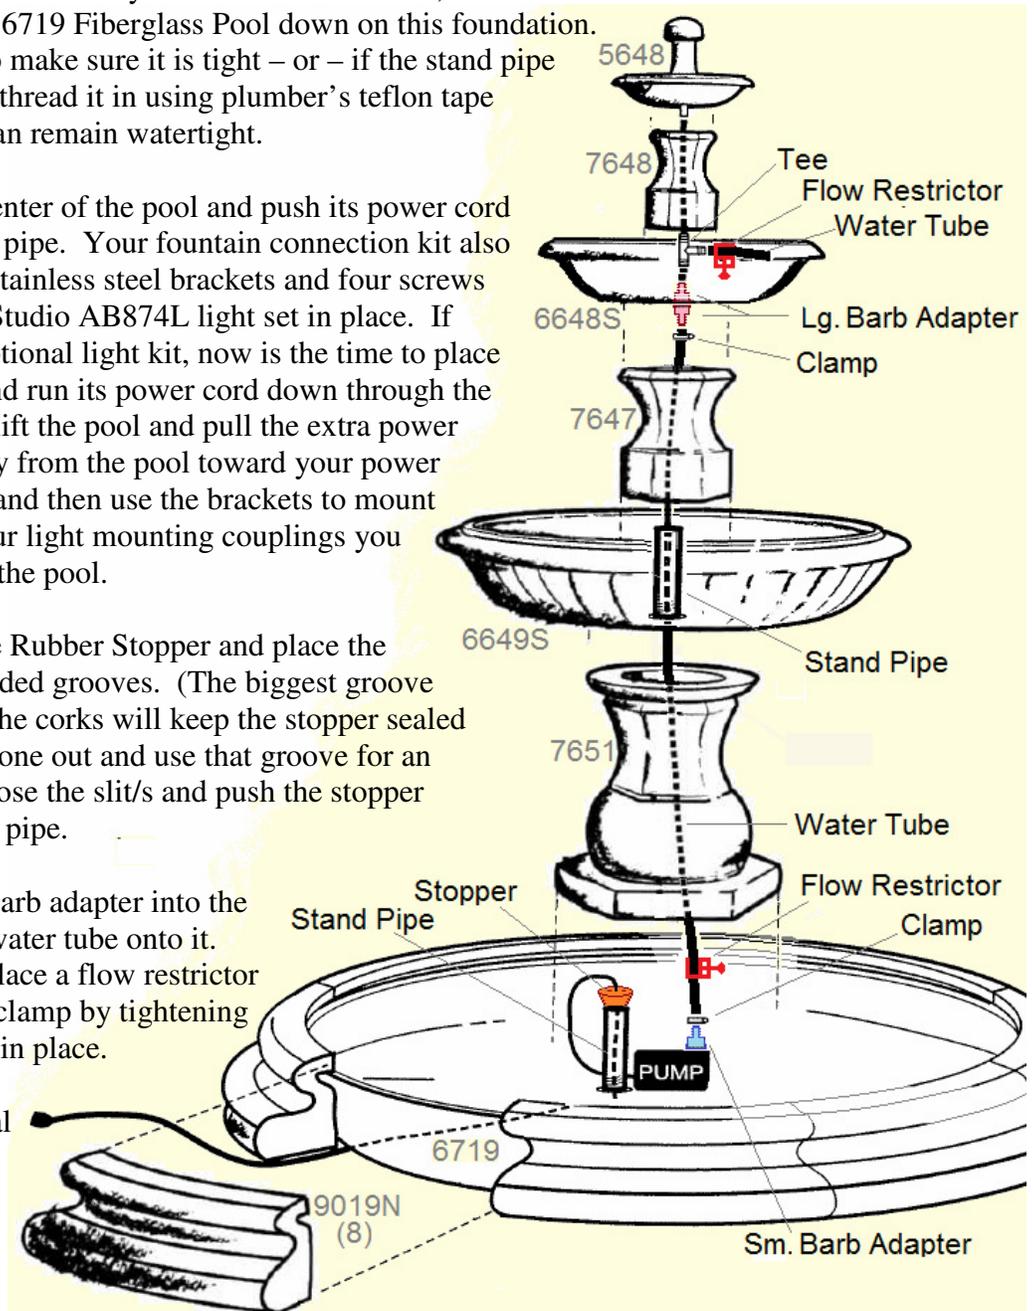

7) Set the 7647 Pedestal in the bowl and pull the tube up through it. Thread the two larger barbed adapters underneath and inside the 6648S Bowl and set the bowl on the pedestal, attaching the tube to the barb underneath and clamping it as you set it down. (See drawing.)

8) Attach the shortest tube to the barb in the 6648S bowl. Push the side end (as shown) of the Tee into the tube's open end. Push the longest remaining tube opposite this – on the other side end of the tee. Push the last short tube on the middle leg of the tee and attach another Flow Restrictor around this tube, turning tight enough to hold in place. (Later, when the fountain is running, you can further tighten either of the two flow restrictors to adjust the power of the water flow.)

9) Set the 7648 Pedestal in the bowl and pull the tube up through. Then lower the 5648 Top on the pedestal, connecting the tube as you set it down.

10) Place the eight 9019N Surrounds around the fiberglass pool.

11) Read your pump and light instructions. Fill the bowls with water and check for level. Shims are supplied to make any needed adjustments. Then plug in the pump and connect to the light transformer to enjoy your fountain. If the pump does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start.

Csd  
csd 4/2019

#### Online Resources

Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
Contact : [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

#### IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.