


SETTING UP THE 4948F1

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

- 1) Prepare a suitable location for your new fountain.
- 2) Set the pump and the light inside the fountain basin. Push their power cords down through the largest hole in the fountain floor – then tip the fountain just enough to grasp the power cords underneath and pull them toward your power supply. Leave enough slack in the cords that allows you to make adjustments inside the fountain.
- 3) The rubber stopper provided has a slit and two preformed holes. Open the slit and install the stopper around the pump cord (in the larger hole) and the light cord, near the floor of the fountain basin. Close the slit and press firmly into the large hole in the basin floor as shown.
- 4) Thread the small adapter into the top of the pump. Thread the larger adapter into the hole under the fountain spout, as shown.
- 5) Place the R1 Flow Restrictor on the middle of the tube and tighten it just enough so it holds in place. Then push each end of the tube over barbs of the two adapters.
- 6) Fill the basin with water. Read your pump and light instructions. Connect the light power cord to its provided transformer. Plug the transformer and pump into your power source to start the fountain.
- 7) If the pump does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start. If the water flows too strongly, you can tighten the flow restrictor to turn it down.

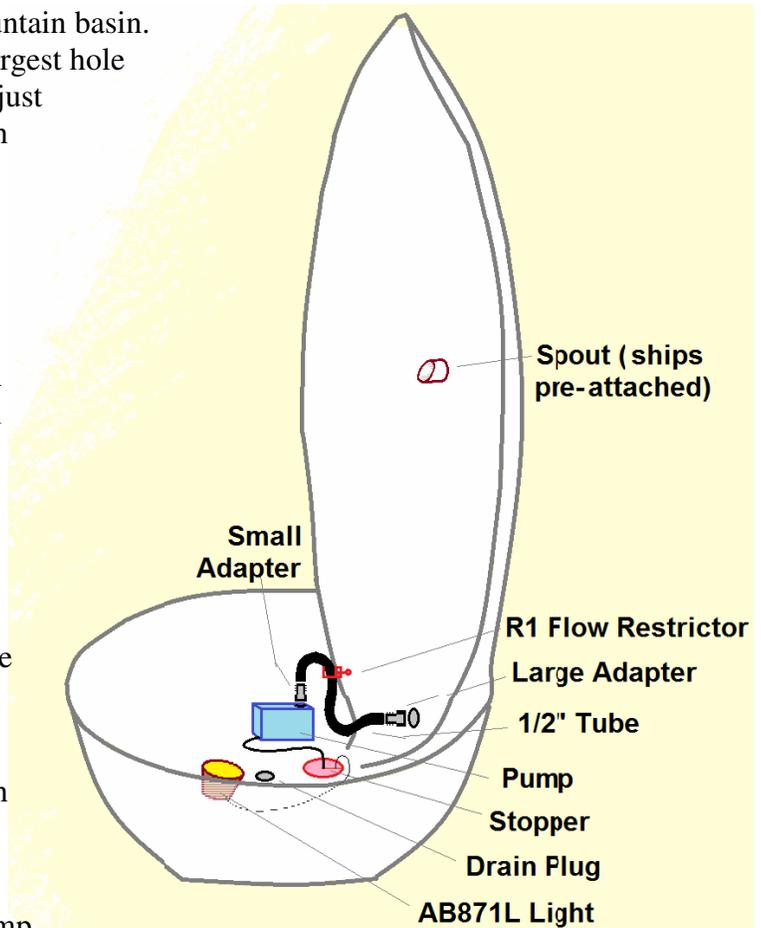

7/19
csd

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.